


Connection example Multicontrol with subdistribution box (emergency lighting system)

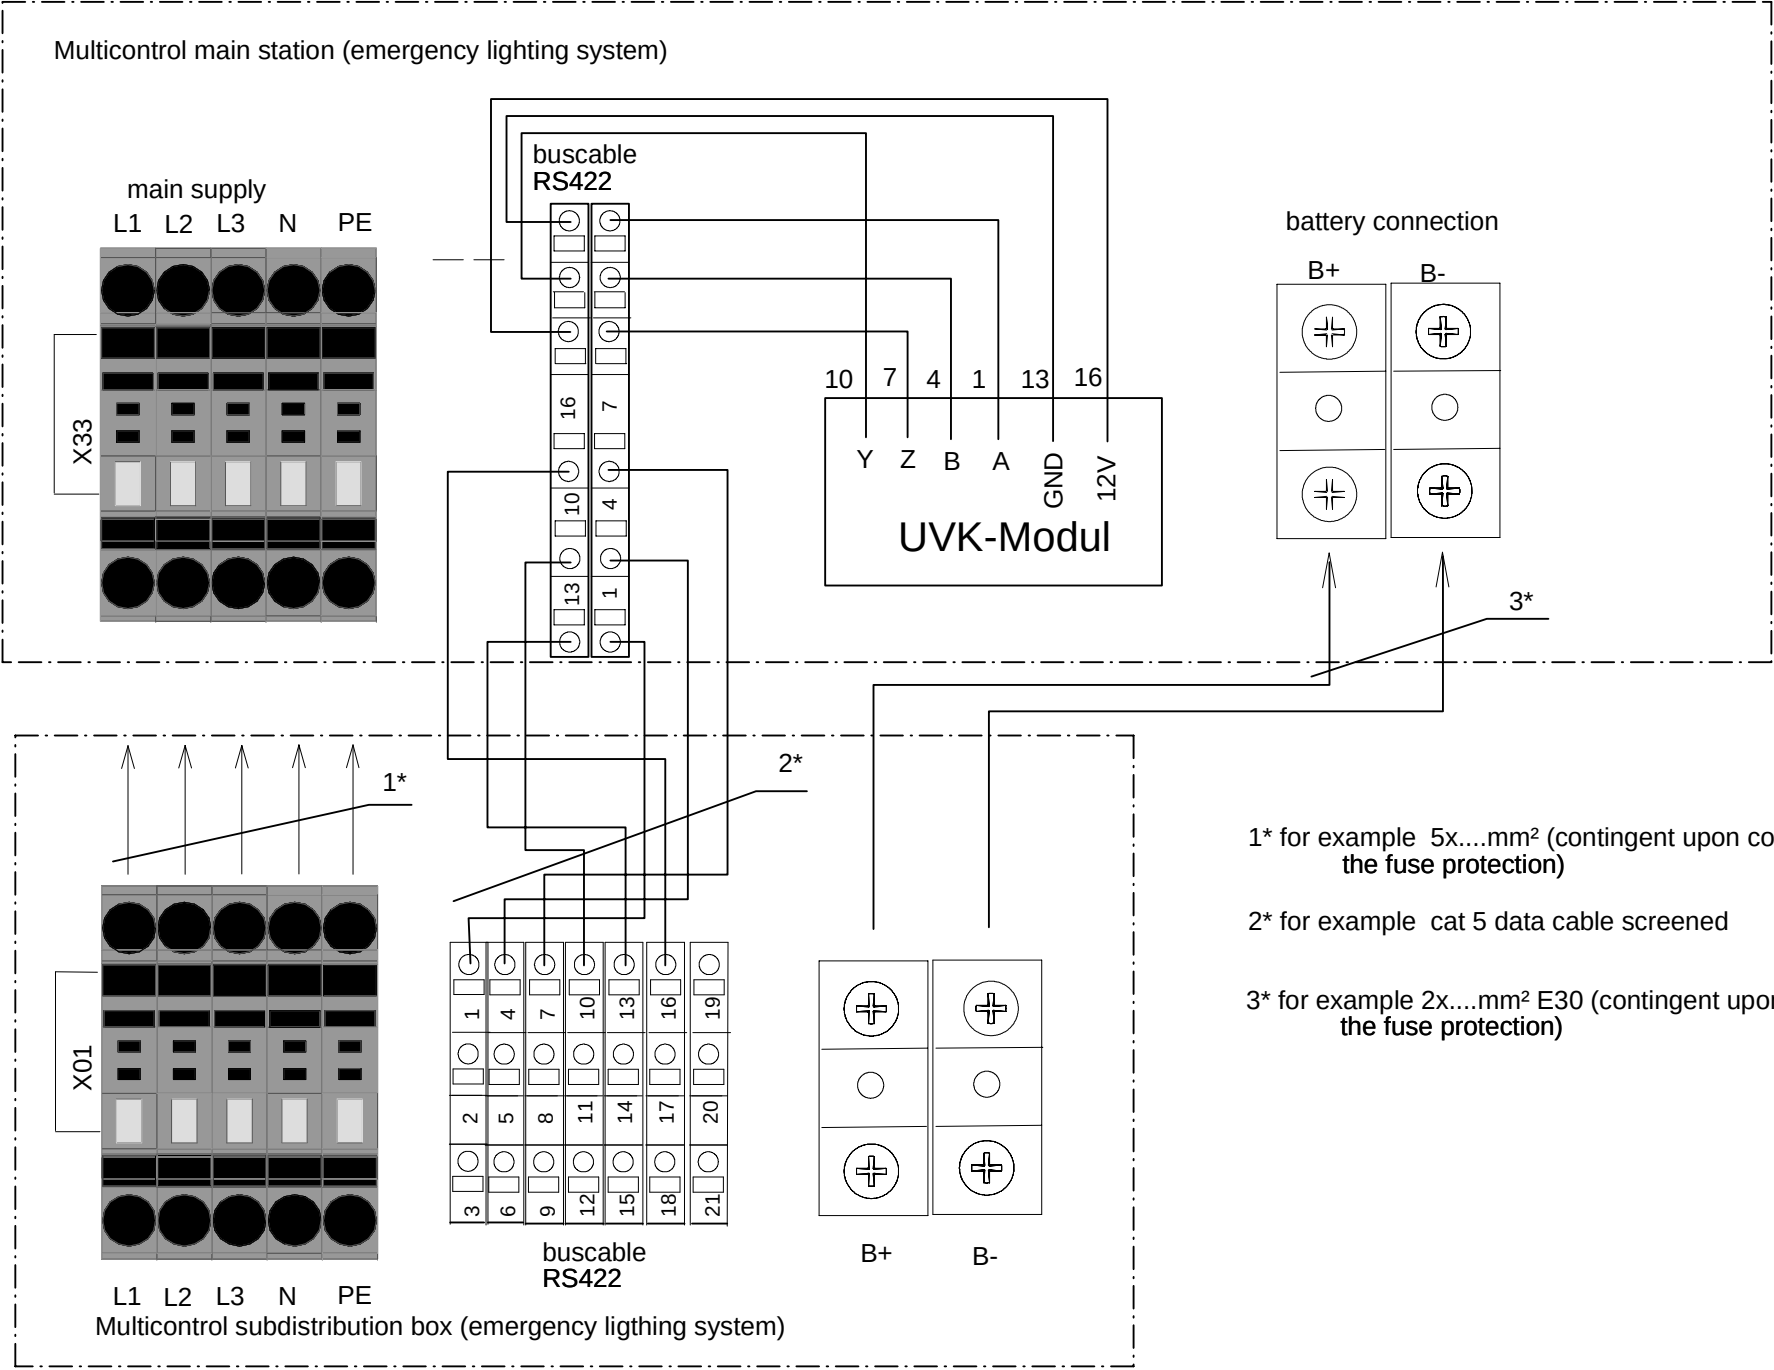

For a faultless function you must connect all wire !